 


EK9288 INSTRUCTION

Suitable for 35L/28L/21L/15L with AA batteries

Part list

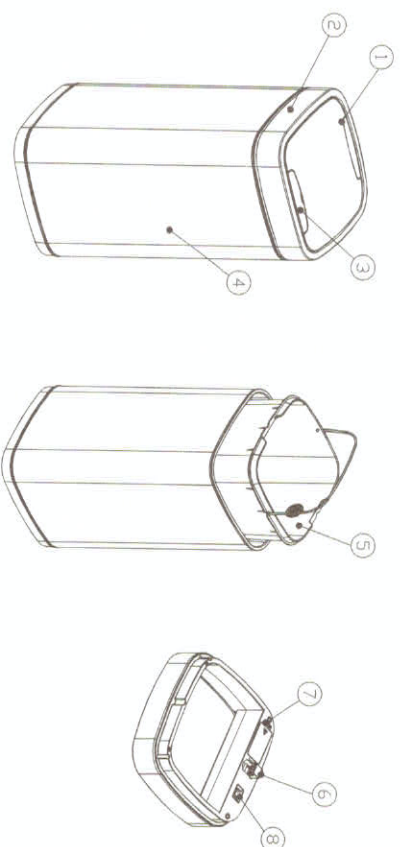

 
1: Flap 2: Lid 3: Button panel 4: Body 5: Liner 6: Clip 7: Battery cover 8: Switch

Battery installation


1) Open the battery cover and take out the battery box




2) Install the batteries in to battery box (4 x LR6(AA))

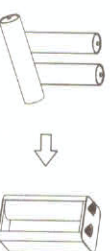

 3) Put the battery box in position and close the battery cover

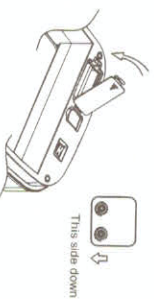

 4) Turn on the switch

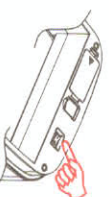

P1

Functions

Effective range:


This product will sense when an object passes through the sensors range, which is 28cm (± 5 cm) above the panel.

Modes:

Waiting mode – The lid stays closed and the bin is waiting for a signal to open. A red light flashes to indicate this mode.

Sensor mode – When the sensor unit spots the signal, the lid will open; the lid will stay open as long as the signal stays in the effective range.

After the object is removed from the range, the lid will close in 5 seconds.

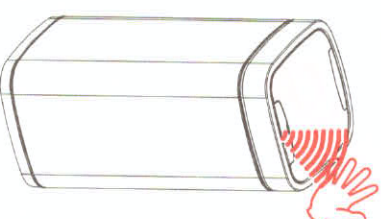

Manual mode - Users can open the lid by pressing the "OPEN" button, the lid will stay open until the "CLOSE" button is pressed. During this mode, a green light in the middle will flash every 6 seconds. Notes: please do not close the lid by hand after pressing the "OPEN" button, because before pressing the "CLOSE" button, the sensor will not work by signals.

Lighting indications



Red/Green light in the middle to indicates Waiting/Manual mode



The lights turn on from left to right when the sensor spot an open signal




The lights turn off from right to left when the open signal is removed

Fixing the trash bag


1) wrap the top rim of the liner with plastic bag (please leave the handle outside for easy operation);

2) press the excess bag into the bag fixer on the liner.

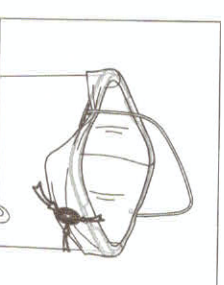

P2


Hanging clip

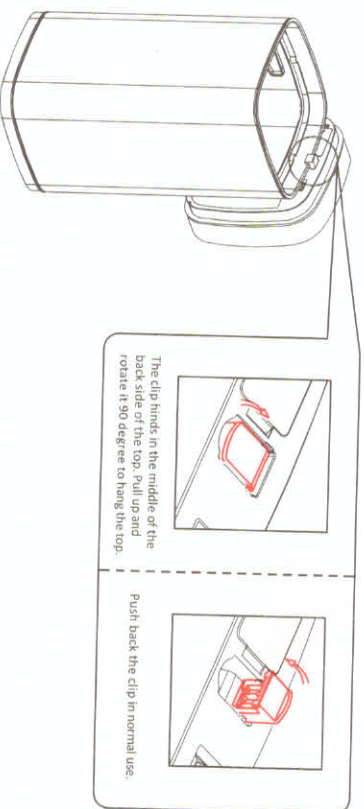

Please push back the clip in normal use.

Bottom draining holes

The holes at the bottom of the back side can help to drain liquid in case any leakage occurs.

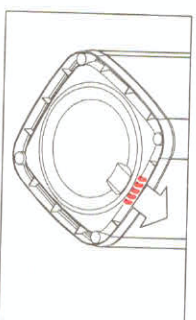

Trouble shooting

- 1) No lights on - Please make sure the batteries are installed correctly.
- 2) No response from sensor - The lid may have been closed by hand in manual mode. Pressing "CLOSE" will reset the modes.
- 3) Lights flashing randomly – It is indicating that the batteries are low. Please install new batteries.

P3

Important Safety Instructions

This appliance is intended for household / commercial use only, and should not be used for any other purpose. Any other use may invalidate the warranty and might be dangerous.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Battery handling and usage

Only adults should handle batteries. Do not allow a child to use this product unless the Battery Compartment Cover is securely attached to the Battery Compartment.

The battery must be removed from the appliance before it is scrapped.

The appliance must be disconnected from the supply mains when removing the battery.

The battery is to be disposed of safely.

Dispose of used batteries according to the instructions.

CAUTION: Risk of explosion if battery is replaced by an incorrect type.

The battery type used in the unit is four LR6(AA) size batteries.

Remove the battery compartment cover located at the bottom of the lid to remove the batteries.

These batteries must be disposed of at your local recycling point.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

P4