








.25" (R)

**8300** 

**SWEEPING**

1. **Press**  to **start** sweeping.
2. **Press**  again to **stop** sweeping. The hopper filter shakes automatically.






**DUMPING HOPPER**

1. **Press**  to **stop** sweeping. The hopper filter shakes automatically.
2. **Press and hold**  until the hopper is raised to desired height.
3. **Press and hold**  to tilt the hopper forward and empty the hopper.
4. **Press and hold**  to tilt the hopper back into the upright position, and retract the hopper down and tight against the machine.





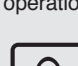
Dimensions: 5.00" (height), 3.00" (width)

Page 1

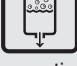**SCRUBBING**

1. **Press**  to **start/stop** scrubbing. **Press and hold** to increase/decrease brush pressure.
2. **Press**  **twice quickly** to activate the super scrub setting for thirty seconds.
3. **Press**  to **extend/retract** the scrub head to/from the right, for close edge scrubbing. For use on machines equipped with 40 in (1016 mm) scrub head only.
4. **Press**  to **start/stop** the ES™ solution system option. Check that the solution tank is full, and the recovery tank is 1/2 full.
5. **Press**  to **start/stop** the detergent metering option. **Press and hold** to increase/decrease detergent flow.

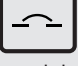


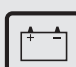


Page 2

7.  will appear when a circuit breaker for scrub brushes has blown and needs to be reset.
8.  will appear for one hour when machine requires maintenance after every 50 hours of operation.
9.  will appear for one hour when machine requires maintenance after every 100 hours of operation.
10.  will appear for one hour when machine requires maintenance after every 500 hours of operation.
11.  will appear for one hour when machine requires maintenance after every 1000 hours of operation.

387520

Page 4

**OPERATIONAL ALARMS**

1.  will appear and alarm will sound when the solution tank is full. For machines equipped with ES™ and Auto Fill only. Icon will disappear and alarm will stop once scrub switch is pressed.
2.  will appear, alarm will sound and machine will stop scrubbing when recovery tank is full.
3.  will begin blinking and alarm will sound when the squeegee has broken away from the vacuum hose.
4.  will begin blinking, alarm will sound and sweeping/scrubbing will stop when battery power is low.
5.  will begin blinking when vacuum fan hose is clogged.
6.  will appear, alarm will sound and sweeping will stop when the thermo sentry detects excessive heat in the hopper.

Page 3



Tennant Blue



Black



Lt. Gray

Rev	Description (was ___ now ___)	Init	Date
□ □	387520 □	DL	02/21/01
□			